

Wiring Diagram for Meyer Type Plows


MILL SUPPLY, INC.
19801 Miles Rd.
Cleveland, OH 44128
800-888-5072



FUSE BOX


-  **43-029**
AGC® Fuse
tap-in
-  **43-028**
ATC®/ATO®
Fuse
tap-in

(Black or Blue Fused Wire) Connect to fuse that is hot only when ignition is on

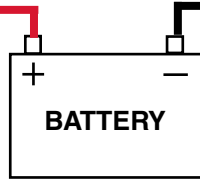

MOTOR SOLENOID

155-0605

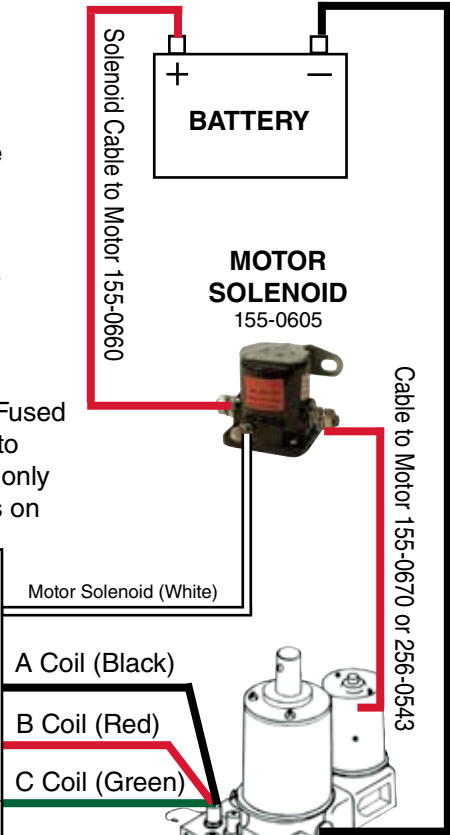

155-0660

Solenoid Cable to Motor 155-0660



155-0675



256-0540

Black Ground Cables to Pump



155-0670



256-0543

Red Cables to Motor



155-0665

Quick Disconnect Battery Cable. Use with 155-0670 and 155-0675.



Shown mounted on an E-47 Pump assembly.

SWITCHES



Toggle Lift and Angle Switch uses 155-0630 Harness.



Slick Stick uses 155-0715 Harness.



155-0632



160-77389

Membrane Switch uses 155-0632 or 160-77389 Harness.



155-0632



160-77308



160-77389

Pistol Grip uses 155-0632, 160-77308 or 160-77389 Harness.

For Membrane Switch and Pistol Grip, Orange wire to ground



09880 - Dielectric Grease, 5 gram (Single use pouch) Provides a moisture-proof barrier that lubricates and protects electrical equipment from salt, dirt and corrosion.