



SwipeLOCK Installation Instructions



#1) Using a drill or sharpie, mark these three holes on truck. Box should be placed as close to the fuel cap as possible for maximum reach.

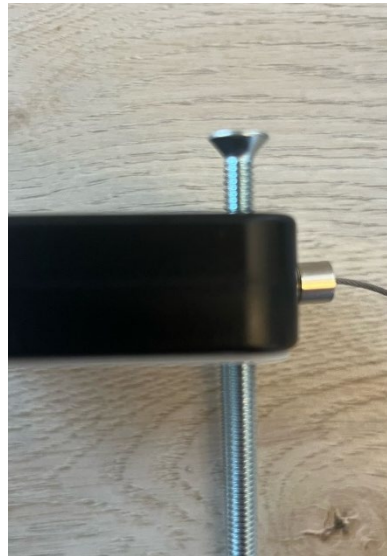

#4) Slide 2 bolts for the cable box through the top two holes of the cable box.

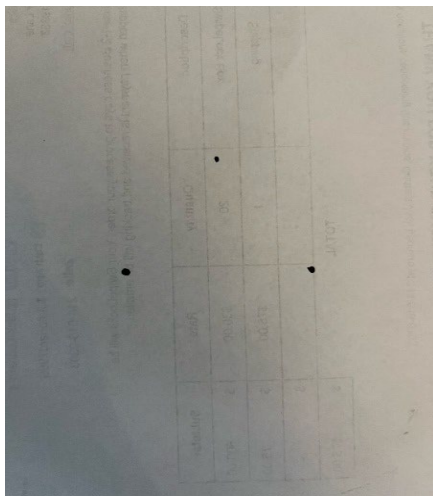

#2) Drill three holes through the side of the van using your markings from step #1.



#5) Now with the two bolts through the reel housing—use two bolts to guide the reel into place and stick the back wall of the cable box to the lock box. Once cable box is stuck, it is VERY hard to remove and if it is not lined up perfectly, it is difficult to get the bolts through.



#3) Peel sticker cover off of reel housing. **DO NOT** stick to inside of lock box yet!



#6) Slide all bolts through van and while someone else holds the nuts and washer from the inside of the van, tighten down the bolts. **DO NOT** overtighten the two bolts on the reel box.

#7) The third bolt goes through the top hole.