



# Arm Mounting Installation Instructions for High Back Seats

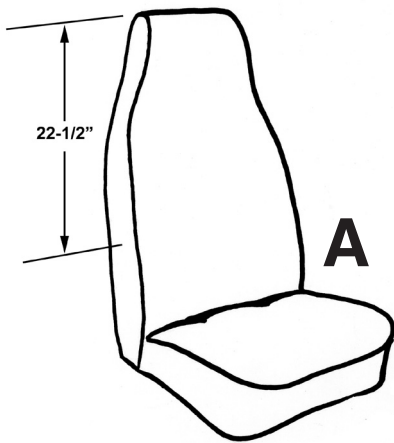


1.) Make sure when sitting in the seat that the arms (Left and Right) go on the correct side of the seat.


2.) Measure down 22-1/2" (figure A) on each side of the seat to locate the pivot point for arms. Use thumb to locate recess where hole is. (figure B) Cut a small "X" in material to expose pivot hole if there is no hole.

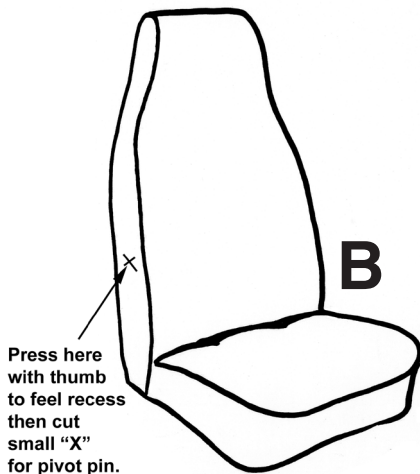

3.) To insert arm, the arm should be pointing behind seat (figure C). (It may be easier to lay seat on its side.) Insert pin on arm into hole on side of seat. Smaller insert pin should be pointing back to fit into slot in side of seat. Push arm in firmly

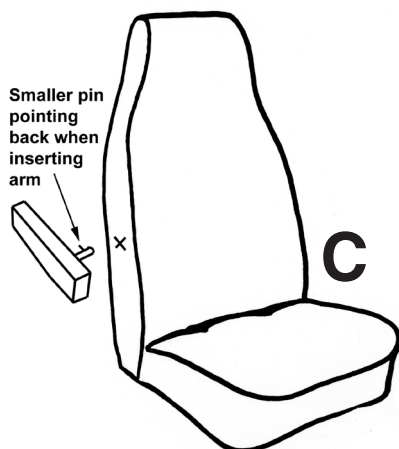

4.) Rotate arm up-and-over (figure D) until arm is pointing forward. Arm is now installed.

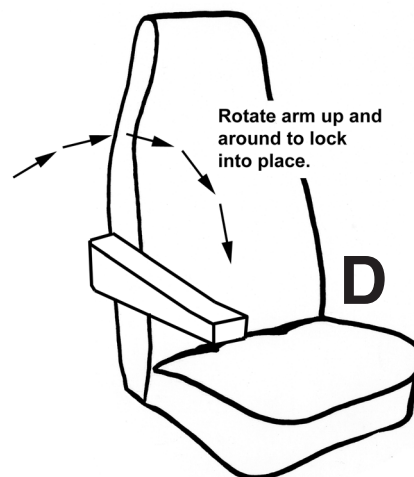

To remove arm, reverse instruction.